

ORBSMART® AW-14L

Handbuch / Manual

Orbsmart AW-14L

CPU	Intel Celeron N5105 Processor (4th Cache, up to 2.90 GHz)
OS	Windows 11 Pro (64-Bit)
RAM	8GB LPDDR4 (not expandable)
Storage	256GB eMMC (not expandable)
Wireless	Wireless 802.11 a/b/g/n/ax (2.4/5GHz)
I/O Ports	1x HDMI 2.0, 1x mini-HDMI, 2x USB 3.0, 1x USB 2.0, 1x RJ45 (10/100/1000 Mbps) 1x USB-C (PD 3.0 Support / Power over Data Transfer) 1x Headset Jack (3.5mm)
Internal	1x M.2 NVMe SSD Slot (2280) up to 4TB
Input	AC-In: 240V~50/60Hz, 12V/2A

Orbsmart AW-14L

1. Power Button
2. USB 3.0
3. USB Type-C
4. Display
5. Headset Jack
6. Micro-SD Card Slot
7. 3.5mm Audio Connect Port
8. RJ45 Ethernet Port
9. HDMI (HDMI 2.0)
10. Kensington Lock Cover
11. Kensington Locking Pin

1. Über das Gerät
- 1.1 Zubehör
- 1.2 Bestimmungsgemäßer Gebrauch
2. Reinigung & Transport
3. 1.5.1 Erweiterung M.2 SSD

1. Inbetriebnahme
- 2.1 Einrichtung

[illegible]